KMT - Kraus Messtechnik GmbH

Gewerbering 9, D-83624 Otterfing, Germany, **2** 08024-48737, Fax. 08024-5532 Home Page http://www.kmt-telemetry.com, Email: info@kmt-telemetry.com



CTP8-Rotate

8 (4) channel telemetry for rotating applications like wheels or rotors, high signal bandwidth, 16bit, software programmable



- Inputs for STG, TH-K, ICP or VOLT
- Simultaneous sampling
- 16 bit resolution
- Software programmable
- Signal bandwidth: up to 24kHz (4 CH)
- Battery power up to 10h
- Radio telemetry transmission
- Output analog +/- 10V
- Digital data interface to PC (option)
- Waterproofed ENC housing (IP65)



Instrumentation Devices SrI
Via Acquanera 29 - 22100 COMO (Italy)
ph +39 031 525 391- fax +39 031 507 984
info@instrumentation.it - www.instrumentation.it

General functions:



The CTP8-Rotate is a 8-channel telemetry system for rotating applications with integrated signal conditioning for sensor signals, wireless digital transmission and analog reproduction.

In the encoder/transmitter unit the sensor signals are conditioned, filtered (anti-aliasing) and digitized (16-bit). Simultaneous sampling is provided for all channels. Finally the PCM encoded data is transmitted via radio frequencies to the receiver.

Various configurations of different sensor modules are available incl. signal conditioning for strain gages (STG), thermocouples type K (TH-K), ICP sensors, potentiometer sensors (POT) and also voltage inputs. Mixed configuration available (2-CH-steps).

All sensor modules are software programmable via LAN-Adapter. The LAN-Adapter has an integrated web interface and enables easy access!


The stationary receiver provides 8x +/-10V analog outputs via BNC socket (option: digital PC interface).

The analog signal bandwidth is 0-750 Hz (320kbit) and up to 0-12000Hz (5000kbit) for 8 channels.

On request is a 4 CH version with 0-24000Hz (5000kbit) also available

The measurement accuracy is $<\pm0.2$ % (without sensor). The CTP8-Rotate is specified for operational temperatures from -20° C to +70° C. The maximum distance between transmitter and receiving antenna is approx. 10-20 m (30-60 feet) – depending on the application! Mixed

configuration available (2-CH-steps).

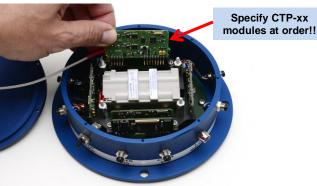

Frequency table	Cut off frequency from anit-aliasing filter (-3dB) and sampling rate (see red)	
Bit rate	4 CH (Option)	8 CH.
50000kbit	24000 Hz (62500 Hz)	12000 Hz (31250 Hz)
2500kbit	12000 Hz (31250 Hz)	6000 Hz (15625 Hz)
1250kbit	6000 Hz (15625Hz)	3000 Hz (7812.5 Hz)
625kibt	3000 Hz (7812.5 Hz)	1500 Hz (3906.25 Hz)
312.5kbit	1500 Hz (3906.25 Hz)	750 Hz (1953.125 Hz)

Different applications:

CAR wheel Truck wheel Helicopter rotor







CTP8-Rotate Transmitting Unit Technical Data (Encoder)





Encoder in IP65 Aluminum housing

Encoder inside

CTP acquisition modules (rotor side)



CTP-STG-V3

Acquisition module for 2 strain gages Full, half and quarter bridge (≥350Ω) Fixed excitation 4V DC Offset calibration by auto zero Manual offset shifting after auto zero Gain: 125-250-500-1000-2000 Test shunt-cal step

Signal bandwidth 0Hz to 24000Hz*

Resolution 16bit Accuracy <0.2%

Current consumption with full bridge 350 ohm 75mA



CTP-VOLT-V3

Acquisition module for 2x high level

Range: ±0,625V, ± 1,25V, ±2,5V, ± 5V,

±10V

Signal bandwidth 0Hz to 24000Hz* (*see table of cut-off-frequency) Resolution 16bit

Accuracy < 0.2% Current consumption 60mA



CTP-ICP®-V3-


Acquisition module for 2 ICP sensors Current EXC. 4mA

Gain: 1-2-4-8-16-32

Signal bandwidth 3 Hz to 24000Hz* (*see table of cut-off-frequency)
Resolution 16bit

Accuracy <0.2%

Current consumption 100mA



CTP-TH-K-V3

Acquisition module for 2x TH-K <u>Inputs galvanic isolated</u> Range -50 to 1000°C, -50 to 500°C or -50 to 250°C

Cut-off filter 30Hz (more on request) Resolution 16bit

Accuracy: 0.2% at 1000°C range Current consumption 110mA



CTP-Pt100/1000 (RTD) V3

Acq. module for 2 RTD sensors Range -100 to 600°C, -50 to 300°C or -25 to 150°C

or -25 to 150°C
Type Pt100 or Pt1000
Current EXC. 1mA
Connection: 4-, 3- and 2 wire
Sensor break detection

Signal bandwidth 6Hz Resolution 16bit Accuracy <0.2%

Current consumption 60mA



CTP-CONTROL-V3

Controller 1- 32 acquisition modules Output: PCM

Programmable via LAN adapter Current consumption 40mA, with LAN-adapter 140mA

System Parameters ENCODER:

Channels: 8 (optional 4 on request)

Resolution: 16 bit A/D converter with anti-aliasing filter, simultaneous sampling of all channels

Line-of-sight distance: up to 20m (depends of application and bit rate)

Powering: Li Ion Accumulator 7.2V 4600mAh, capacity up to 10 hours Power consumption: 400 mA using 8x STG full bridge sensors 350 Ohms

Analog signal bandwidth: See table

Transmission: Digital PCM Miller format - FSK

Transmission Power: 10mW!

Dimensions: Diameter 145mm, bottom plate diameter 175mm, height 62mm (without antenna)

Weight: 1.3 kg without sensor cables

Operating temperature: - 20 ... +70°C


Housing: Aluminum anodized, waterproofed (IP65)

Humidity:20 ... 80% no condensingVibration:5g Mil Standard 810C, Curve CStatic acceleration:100g in all directions, 3000 RPM

Shock: 200g in all directions

Technical specifications are subject to change without notice!

CTP-DEC8 Receiver unit for max 8 Channels output BNC (radio transmission version with diversity receiver 312.5 ... 1250kbit)

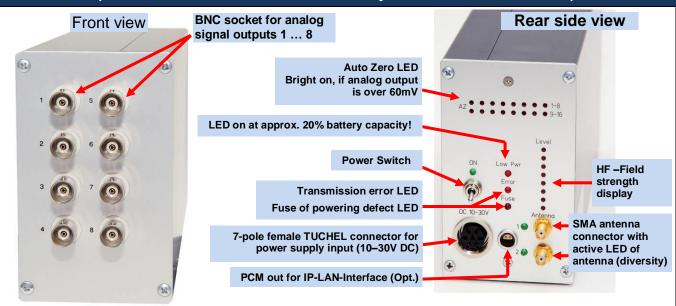

CTP –DEC8 System Parameters:

Channel: 8 x +/-10V analog outputs BNC socket
Resolution: 16 bit D/A converter, with smoothing filter

Power supply input: 10-30 VDC, power consumption <24 Watt

Transmission: Digital PCM Format – FSK,

Dimensions: 205 x 105 x 65mm

Weight: 1.25 kg without cables and antenna Overall system accuracy between encoder input and decoder output: +/-0.25% without sensor influences

Environmental

Operating: -20 ... +70°C


Humidity: 20 ... 80% not condensing

Vibration: 5

Static acceleration: 10g in all directions
Shock: 100g in all directions

SET of CTP8-Rotate 315.5k...1250kibt telemetry



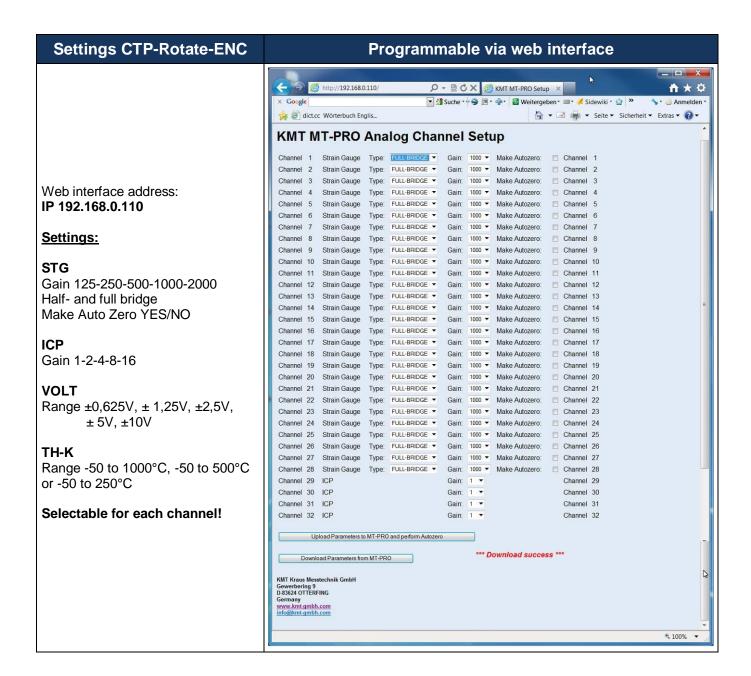



Version 2016-05

