

High Temperature Miniature Pressure Sensor



Features

- ➔ Available with 0,5-4,5Vdc output
- ➔ Robust and reliable sensor
- ➔ Miniature pressure sensor
- ➔ Operating from -40 to +175°C

Applications

- ➔ Automotive - on vehicle
- ➔ Oil & gas
- ➔ Aerospace
- ➔ Military

Operating from -40 up to +175°C, the PHT120 series is dedicated to high temperature pressure measurements. With all stainless steel wetted parts, it is compatible with most media, including corrosive fluids used in automotive, aerospace and energy industries. Equipped with the premium thin film technology developed by EFE, its performances and stability over wide temperature range are excellent. The PHT120 is available with unamplified output (mV/V), compensated in temperature to deliver the best accuracy. Amplified output (Vdc) is also standard, thanks to a high performance and ruggedized built-in electronic module.

Technical specifications

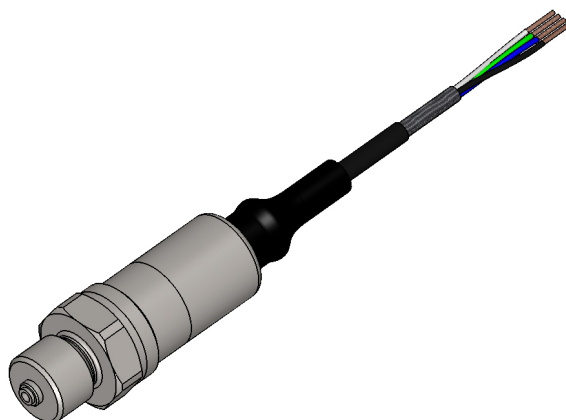
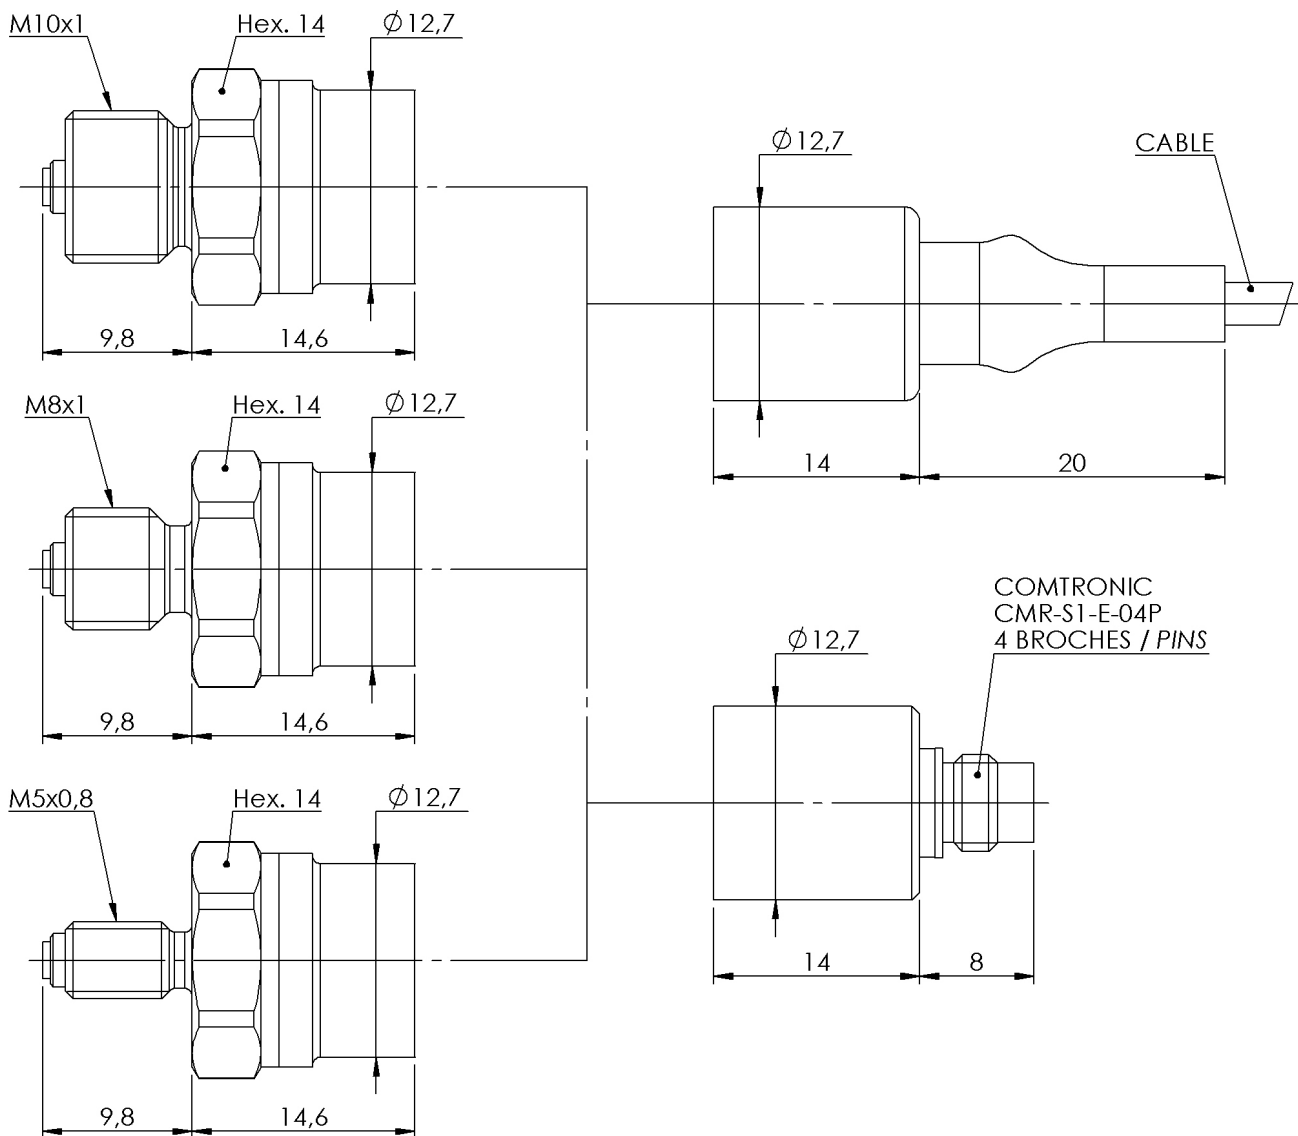
Pressure ranges (FS)	±1bar ; -1/+2bar ; -1/+3bar ; 2bar ; 5bar ; 10bar ; 20bar ; 40bar ; 70bar ; 250bar ; 400bar ; ±14.5PSI ; -14.5/+30PSI ; -14.5/+40PSI ; 30PSI ; 70PSI ; 150PSI ; 300PSI ; 500PSI ; 1000PSI ; 3000PSI ; 5000PSI
Type	Absolute ; Gage
Type (for ranges > 40 bar)	Sealed Gage
Safe overload	150% FS
Burst pressure	300% FS
Output impedance	> 3000 Ohms typ.
Input impedance	> 3500 Ohms typ.
Power supply	5 to 15Vdc
Consumption	< 10mA
Insulation	> 1000 MOhms under 50Vdc at ambient temperature
Output at -100%FS (only for ± range)	Proportional to +100%FS
Output at 0%FS	0mV/V

Technical Specifications


Output at 100%FS	1.5mV/V nom.
Zero and sensitivity settings tolerances	±3% FS
Non linearity and hysteresis combined	±0.25% FS typical (±0.35% FS max.)
Non repeatability	±0.02% FS typ.
Compensated temperature range	-30 to +150°C Option : 0 to +175°C
Operating temperature range	-40 to +150°C (-40 to +175°C if optional compensation up to 175°C)
Combined thermal zero & sensitivity shifts	±0.02% FS/°C
Constant acceleration in linear vibrations	± 0.02% FS/g (frequency 20-2000Hz, 50g max.)
Mechanical shock	100g ½ sinus 1ms
Electrical protection	Protected against polarity inversion
EMC protection	Compliant to EN61000
Electrical connection up to 150°C	AWG26, Viton Jacketed Shielded Cable Ø3mm, 4 wires Option : Miniature Receptacle 4 pins CMR-S1-E-04P
Electrical connection above 150°C	AWG26 Shielded Teflon Cable Ø3.4mm ±0.2, 5 wires Option : Miniature Receptacle 4 pins CMR-S1-E-04P
Mechanical connection	M10x1-4h male ; M5x0.8-6g male Option : M8x1-6g male
Material(s) of wetted parts	Stainless Steel 316L ; Stainless Steel 17-4PH ; Stainless steel 15-5PH
Weight	10g without cable
Enclosure protection	IP65 for absolute & sealed gage version

Codification

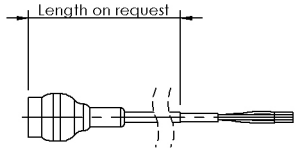

High Temperature Miniature Pressure Sensor	PHT12	1	S	10bar	A	02	06	F	3	1	
Output Signal											
mV/V		1									
Material											
Stainless Steels			S								
Range											
Example				10bar							
Type											
Absolute					A						
Gage					G						
Sealed Gage					SG						
Mechanical connection											
M10x1-4h male						02					
M8x1-6g male						03					
M5x0.8-6g male						05					
Electrical connection											
Miniature Receptacle 4 pins CMR-S1-E-04P							06				
AWG26, Viton Jacketed Shielded Cable Ø3mm, 4 wires							08/1m				
AWG26 Shielded Teflon Cable Ø3.4mm ±0.2, 5 wires							09/1m				
Compensated temperature range											
-30 to +150°C								F			
0 to +175°C								G			
Non linearity and hysteresis combined											
±0.25% FS typical (±0.35% FS max.)									3		
Combined thermal zero & sensitivity shifts											
±0.02% FS/°C										1	



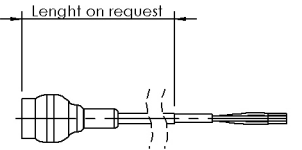

DIMENSIONS : mm



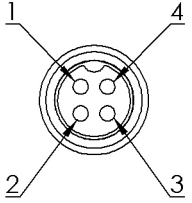
5 CONDUCTOR TEFLON CABLE	
mV/V OUTPUT	CONDUCTOR
+ EXCITATION	RED
+ SIGNAL	GREEN
- SIGNAL	WHITE
- EXCITATION	BLACK
NC	BLUE
SENSOR HOUSING	SHIELD

#26 AWG, 4 CONDUCTOR SHIELDED VITON CABLE	
mV/V OUTPUT	CONDUCTOR
+ EXCITATION	RED
+ SIGNAL	GREEN / YELLOW
- SIGNAL	WHITE
- EXCITATION	BLUE / BLACK
SENSOR HOUSING	SHIELD

MICROTECH DR-4S-4H - 4 PINS	
mV/V OUTPUT	PIN
+ EXCITATION	PIN 1
+ SIGNAL	PIN 4
- SIGNAL	PIN 2
- EXCITATION	PIN 3
SENSOR HOUSING	CONNECTOR HOUSING



Agent :



E.F.E.
 L'ESSOR FRANCAIS ELECTRONIQUE
 16 Rue Porte a Bateaux - 27540 Ivry-la-Bataille - FRANCE
 Tel : 33 (0)2 32 22 35 05 - Fax : 33 (0)2 32 36 93 08
www.efc-sensor.com - infos@efc-sensor.com

