## MEMS Capacitive Accelerometer

# 4SC

## ASC 5521-MF / ASC 5525-MF

- Triaxial
- MF (Medium Frequency; DC to 2.5 kHz
- > 8 or 12 Wire System
- Amplified Output
- Aluminium Housing / Stainless Steel Housing
- Made in Germany

#### **Features**

- Range: ±2g to ±200g
- DC Response
- Gas Damped
- Excellent Bias and Scale Factor Stability
- Low Power Consumption
- Differential Mode

#### **Options**

- Customised Cable Length
- Customised Connector
- ► TEDS Module

#### **Applications**

- Structural Monitoring and Testing
- Endurance Testing
- Brake Test
- Vibration Monitoring
- Civil Engineering
- Modal Analysis
- Vehicle Testing
- Automotive Ride Quality
   & Comfort
- Railway Engineering
- ▶ Flutter Test
- Seismic Monitoring
- Tilt Measurements

## Capacitive MEMS Technology


ASC's Medium Frequency (MF series) capacitive accelerometers are based on the capacitive sensing technology and produce an analog voltage proportional to the input acceleration. The accelerometers can measure both static (gravity) and dynamic accelerations. ASC's MF series can be used for very low to medium frequency vibration measurements from 0Hz to 2.5kHz. The MF series features a MEMS sensor element where the seismic mass is connected between two conductive capacitor plates. When subjected to an input acceleration, the seismic mass oscillates between the two capacitor plates and there is a change in the capacitance. This change in capacitance is converted via an ASIC (Application Specific Integrated Circuit) into a low impedance analog voltage output signal.

## **Description**

ASC's MF series capacitive accelerometers, 5521-MF and 5525-MF, are analog voltage output sensors. The sensors can be powered by a DC power supply (+5V to +40V) where the output voltage is independent of the supply. The sensors operate in a differential configuration with ±2.7V full-scale output. For the full-scale acceleration range, the output swings between 0.3V and 3V. The differential configuration results in an improved S/N ratio and a better performance.

ASC Type 5521-MF and 5525-MF operate in a wide temperature range from -40°C to +125°C. The sensors exhibit exceptional temperature stability, very low non-linearity (<0.5%) and can withstand repetitive shocks as high as 6000g's.

ASC Type 5521-MF features a lightweight Aluminium housing and Type 5525-MF features a rugged, corrosion proof stainless steel housing. The sensors are supplied with 6m integral cable as a standard.

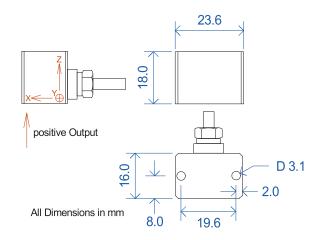

ASC GmbH · Advanced Sensors Calibration · Ledererstraße 10 · 85276 Pfaffenhofen · Germany · Tel. +49 (0) 8441 786 547 · 0 · office@asc-sensors.de



## **Typical Specifications**

## **DYNAMIC**

			<u></u>	Range (±g)				
		2	5	10	30	50	100	200
Sensitivity	mV/g	1350	540	270	90	54	27	13.5
Frequency response: ±5%	Hz	700	700	1400	1600	1800	1800	1800
Amplitude non-linearity	% FS0			<0.5				
Transverse sensitivity	%			<3				
Shock limit	g <sub>pk</sub>	6000 (0.1ms, half-sine)						
Recovery time	ms			1				
ELECTRICAL								
Excitation voltage	V DC			5 to 40				
Supply current	mA			15				
Zero acceleration output	±mV			50				
Output Impedance	Ω			300				
Isolation			(	Case Isolate	:d			
Spectral noise	μg/√Hz	10	20	35	100	170	340	680
Residual / Broadband noise								
(±5% frequency range)	μV	360	290	360	360	390	390	390
ENVIRONMENTAL								
Temperature coefficient								
of sensitivity	%/°C			0.01				
(Thermal sensitivity shift)								
Temperature coefficient								
of bias	mg/°C	0.2	0.5	1	3	5	10	20
(Thermal zero shift)								
Operating temperature range	°C			-40 to +125				
Storage temperature range	°C	-55 to +125						
Humidity/Sealing		Epoxy sealed						
PHYSICAL								
Sensing element			ME	MS Capaci	tive			
Case material	Aluminium/Stainless Steel							
Connector (at cable end)		Optional						
Mounting		Adhesive/screw holes						
Weight (without cable)	gram			C 5521-MF:				
•	<b>U</b>		_	C 5525-MF				
Cable		30 gram/meter; P	UR: AWG 3	0: Diameter	: 4.4mm			

## **FACTORY CALIBRATION (SUPPLIED WITH THE SENSOR)**

Range	2g and 5g	10g	30g	50g to 200g
Sensitivity	at 16Hz and 0.5g	at 80Hz and 5g	at 80Hz and 15g	at 80Hz and 20g
Frequency Response min. 5%	1 to 100Hz	10 to 1400Hz	10 to 1600Hz	10 to 1800Hz

## **CALIBRATION DIN ISO 17025 (ORDER SEPARATELY)\***

Range	2g and 5g	10g	<b>30</b> g	50g to 200g
Sensitivity	at 16Hz and 0.5g	at 80Hz and 5g	at 80Hz and 15g	at 80Hz and 200g
Frequency Response	0.5 to 200Hz	10 to 2000Hz	10 to 2300Hz	10 to 2500Hz

#### Cable Code/Pin Configuration

Cable Coue/I II	ı vunnyuratıvn				
8-wiring-System		12-wiring-Syste	12-wiring-System		
Red	Supply +	X-Axis:			
Black	Supply -	Red/Violet	Supply +		
		Black/Violet	Supply -		
X-Axis:		Green/Violet	Signal +		
Green/Violet	Signal +	White/Violet	Signal -		
White/Violet	Signal -				
		Y-Axis			
Y-Axis:		Red/Grey	Supply +		
Green/Grey	Signal +	Black/Grey	Supply -		
White/Grey	Signal -	Green/Grey	Signal +		
		White/Grey	Signal -		
Z-Axis:					
Green	Signal +	Z-Axis:			
White	Signal -	Red	Supply +		
		Black	Supply -		
		Green	Signal +		

## **ORDERING INFORMATION**

۸۹۲	5521-MF	002	6	А
Model number	Model number	Range (Ex. 050 is 50g)	Cable length (meters)	Connector & Pinout
				A: no connector

Signal -

White

## ASC GmbH · Advanced Sensors Calibration

Ledererstraße 10 · 85276 Pfaffenhofen · Germany · Tel. +49 (0) 8441 786 547 -0 · office@asc-sensors.de

All data, information, statements, photographs and graphic illustrations made in this data sheet are without any obligation and raise no liabilities to or form part of any sales contracts of ASC GmbH or any affiliates for components referred to herein.

© ASC GmbH 2011. All rights reserved. No part of this copyrighted work may be reproduced, modified or distributed in any form or by any means, or stored in any database or retrieval system, without the prior written permission of ASC GmbH or its affiliates. Any such unauthorized use for any purpose is a violation of the relevant copyright laws. Revision Jun2017







<sup>\*</sup> accredited by the German accreditation body (Deutsche Akkreditierungsstelle, DAkkS) to DIN EN ISO / IEC 17025